


Quick Start Guide - <cbYnk Y`DUdYf`Ygg Recorders


1. Connections

Ez-MiniTrend MultiTrend Rear panel

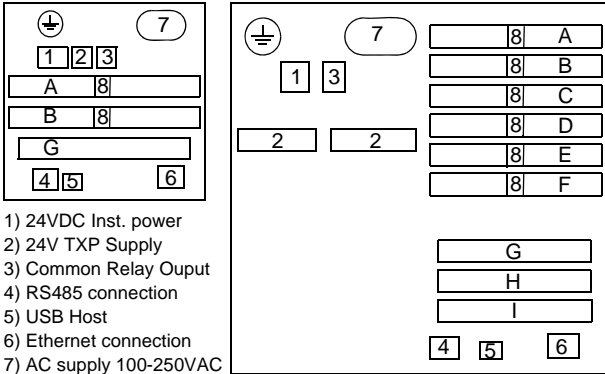


Analogue Input board (4, 6 or 8 channel).


QX = Slots A & B, SX = Slots A to F

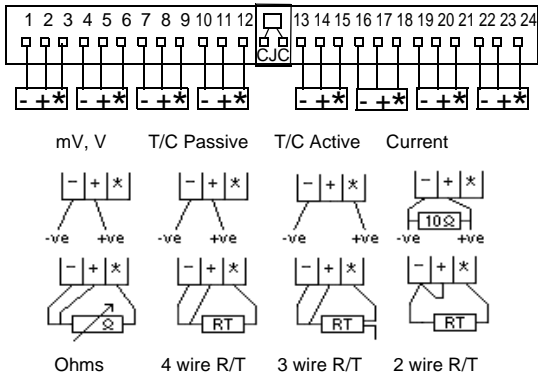

 
Analogue Output (2 or 4 channel). QX = Slot B only, SX = Slots E&F

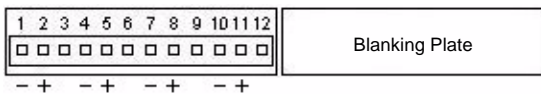

 
Pulse Input (4 channel). QX = Slots A & B, SX = Slots A to F

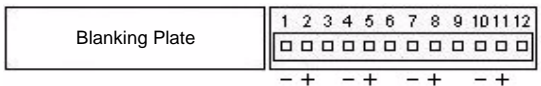

Relay Alarm (4 or 8 channel). QX = Slot G, SX = Slots G to I

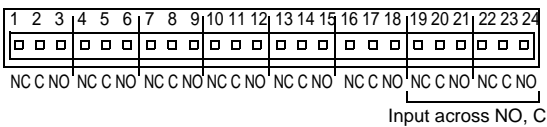

 
Digital Input/Output (8 or 16 channel). QX = Slot G, SX = Slots G to I

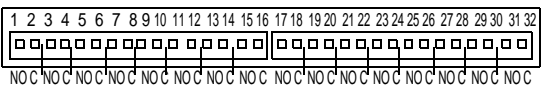

Key: NO = Normally Open, C = Common, NC = Normally Closed,

(2) 24V Transmitter Power Supply connections are made via 2-way for QX, 2x10-way connectors for SX.

 2. Setup Menu

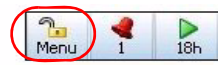

Select the Menu button from the Process Screen



Options

Select Options in Credits menu, tick firmware options to enable. Go to Finish and Commit



Inputs

All Analogue Inputs default to 12V



Select Input channel

- Setup input Type. V, A, Ohms, RT, TC
- Select Sample Rate
- Select Range / RT / TC Type

Use Back button to return to Setup Menu

Pens



By default Pen 1 displays Analogue Input 1, Pen 2 displays Analogue 2 etc.

Select Pen

- Setup Scale
- Set Alarms, if required
- Setup Logging (required to Log and Save data in memory)

Use Back button to return to Setup Menu

Localization

Settings for Language and Time Zones, etc.



Settings (Main Menu > Configure)



Recording menu allows:

- stop/start recording
- immediate download of recorded data

Message Count menu allows quick access to Batch, User Mark on chart, and Messages Detail



View Alarms

Alarm Status/
Configure
Individual Alarm
Acknowledge

Acknowledge
all Alarms



Print
process
screen
Modify
screen
layouts
Replay
chart
history
List of
available
screens
View
available
screens



Enter recorder
Setup menu

Touch the screen
to activate a short
cut to Settings
such as change
the chart speed

Stylus (for use with
the touch screen)

Recorder ID No. & Name
alternates with the
Screen Name

Time and Date

Chart Area

Realtime Pen Pointers

Pen Digital Read-out
(DPM)

Compact
Flash slot

Compact Flash
card eject

Compact Flash
busy LED.
DO NOT remove
card if LED is lit

USB Host Port.
Connect Keyboard/Mouse for
set up or USB memory for
data transfer

